


ESP32 Bluetooth Classic with Arduino IDE – Getting Started

The ESP32 comes with Wi-Fi, Bluetooth Low Energy and Bluetooth Classic. In this tutorial, you'll learn how to use ESP32 Bluetooth Classic with Arduino IDE to exchange data between an ESP32 and an Android smartphone.

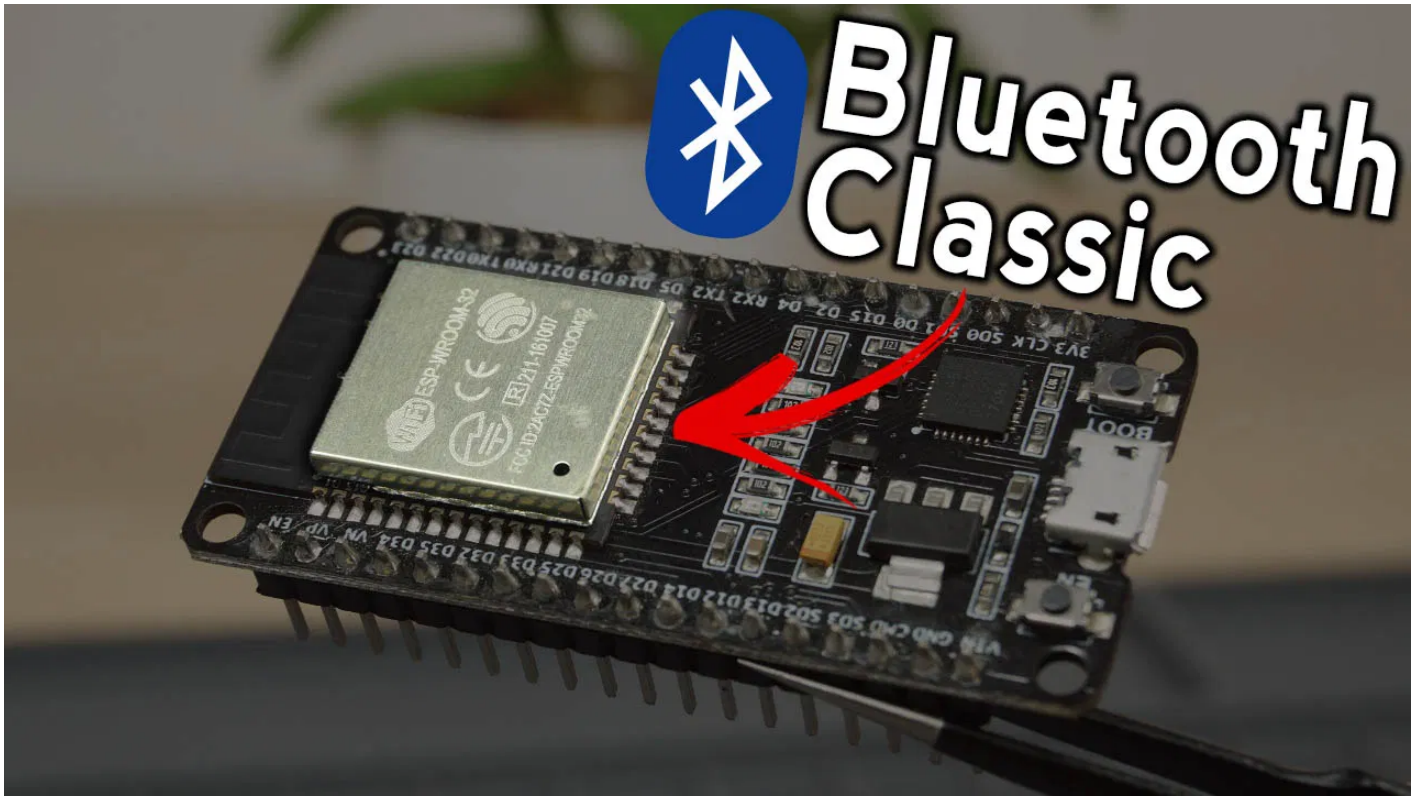

We'll control an ESP32 output, and send sensor readings to an Android smartphone using Bluetooth Classic.


Note: this project is only compatible with Android smartphones.

Watch the Video Tutorial

You can watch the video tutorial or keep reading this page for the written instructions.

Bluetooth Classic with ESP32

At the moment, using Bluetooth Classic is much more simpler than [Bluetooth Low Energy](#). If you've already programmed an Arduino with a [Bluetooth module like the HC-06](#), this is very similar. It uses the standard serial protocol and functions.

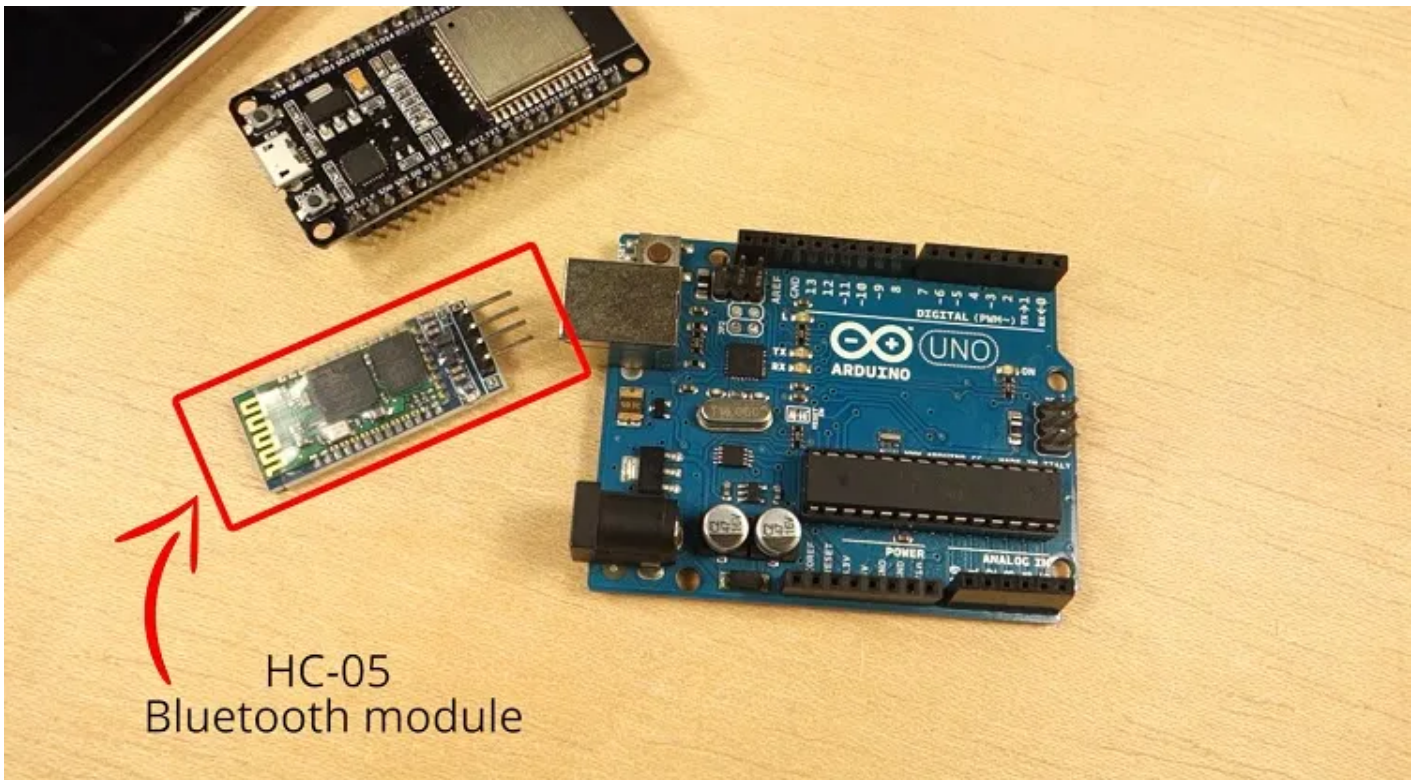

In this tutorial, we'll start by using an example that comes with the Arduino IDE. Then, we'll build a simple project to exchange data between the ESP32 and your Android smartphone.

Parts Required

To follow this tutorial, you need the following parts:

- [ESP32 DOIT DEVKIT V1 Board](#) (read [Best ESP32 development boards](#))
- Android Smartphone with Bluetooth
- [5mm LED](#)
- [330 Ohm resistor](#)
- [DS18B20 temperature sensor](#)
- [4.7k Ohm resistor](#)
- [Jumper wires](#)
- [Breadboard](#)


You can use the preceding links or go directly to [MakerAdvisor.com/tools](https://makeradvisor.com/tools) to find all the parts for your projects at the best price!



Bluetooth Terminal Application

To proceed with this tutorial, you need a Bluetooth Terminal application installed in your smartphone.

We recommend using the Android app “[Serial Bluetooth Terminal](#)” available in the Play Store.

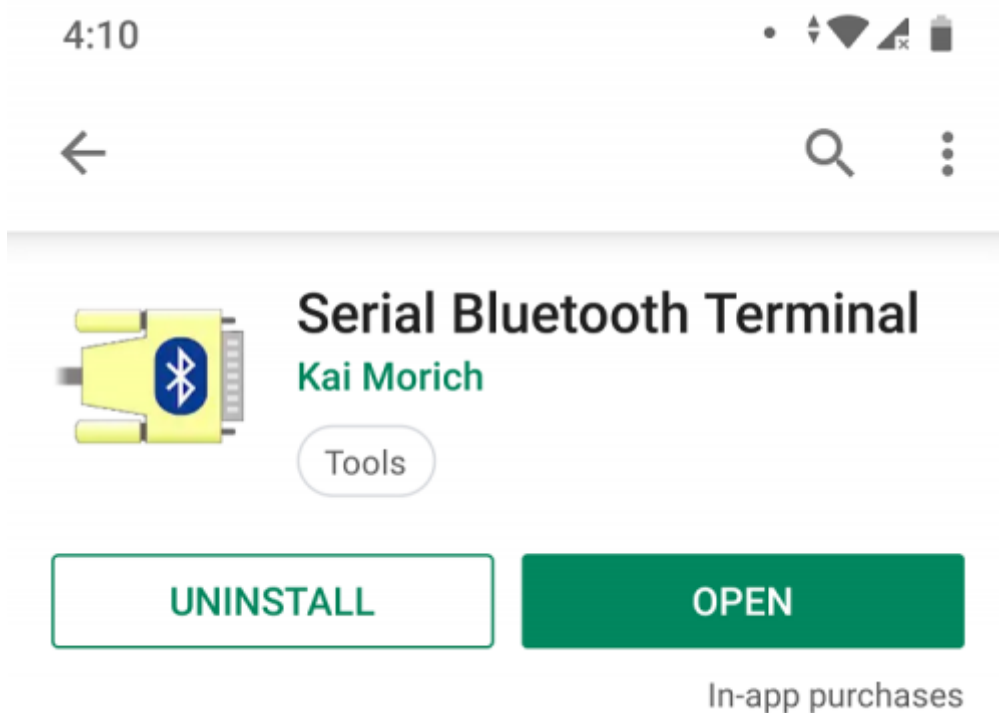

Serial to Serial Bluetooth

We'll program the ESP32 using Arduino IDE, so make sure you have the ESP32 add-on installed before proceeding:

- [Windows: instructions – ESP32 Board in Arduino IDE](#)
- [Mac and Linux: instructions – ESP32 Board in Arduino IDE](#)

Open your Arduino IDE, and go to **File > Examples > BluetoothSerial > SerialtoSerialBT**.

The following code should load.

```
//This example code is in the Public Domain (or CC0 licensed, at your option.)
//By Evandro Copercini - 2018
//
//This example creates a bridge between Serial and Classical Bluetooth (SPP)
//and also demonstrate that SerialBT have the same functionalities of a normal Seri

#include "BluetoothSerial.h"

#if !defined(CONFIG_BT_ENABLED) || !defined(CONFIG_BLUEDROID_ENABLED)
#error Bluetooth is not enabled! Please run `make menuconfig` to and enable it
#endif
```

```
BluetoothSerial SerialBT;

void setup() {
  Serial.begin(115200);
  SerialBT.begin("ESP32test"); //Bluetooth device name
  Serial.println("The device started, now you can pair it with bluetooth!");
}

void loop() {
  if (Serial.available()) {
    SerialBT.write(Serial.read());
  }
  if (SerialBT.available()) {
    Serial.write(SerialBT.read());
  }

  delay(20);
}
```

[View raw code](#)

How the Code Works

This code establishes a two-way serial Bluetooth communication between two devices.

The code starts by including the `BluetoothSerial` library.

```
#include "BluetoothSerial.h"
```

The next three lines check if Bluetooth is properly enabled.

```
#if !defined(CONFIG_BT_ENABLED) || !defined(CONFIG_BLUEDROID_ENABLED)
#error Bluetooth is not enabled! Please run `make menuconfig` to and enable it
#endif
```

Then, create an instance of `BluetoothSerial` called `SerialBT`:

```
BluetoothSerial SerialBT;
```

setup()

In the `setup()` initialize a serial communication at a baud rate of 115200.

```
Serial.begin(115200);
```

Initialize the Bluetooth serial device and pass as an argument the Bluetooth Device name. By default it's called **ESP32test** but you can rename it and give it a unique name.

```
SerialBT.begin("ESP32test"); //Bluetooth device name
```

loop()

In the `loop()`, send and receive data via Bluetooth Serial.

In the first if statement, we check if there are bytes being received in the serial port. If there are, send that information via Bluetooth to the connected device.

```
if (Serial.available()) {  
    SerialBT.write(Serial.read());  
}
```

`SerialBT.write()` sends data using bluetooth serial.

`Serial.read()` returns the data received in the serial port.

The next if statement, checks if there are bytes available to read in the Bluetooth Serial port. If there are, we'll write those bytes in the Serial Monitor.

```
if (SerialBT.available()) {  
    Serial.write(SerialBT.read());  
}
```


It will be easier to understand exactly how this sketch works in the demonstration.

Testing the Code

Upload the previous code to the ESP32. Make sure you have the right board and COM port selected.

After uploading the code, open the Serial Monitor at a baud rate of 115200. Press the ESP32 Enable button.

After a few seconds, you should get a message saying: *"The device started, now you can pair it with bluetooth!"*.

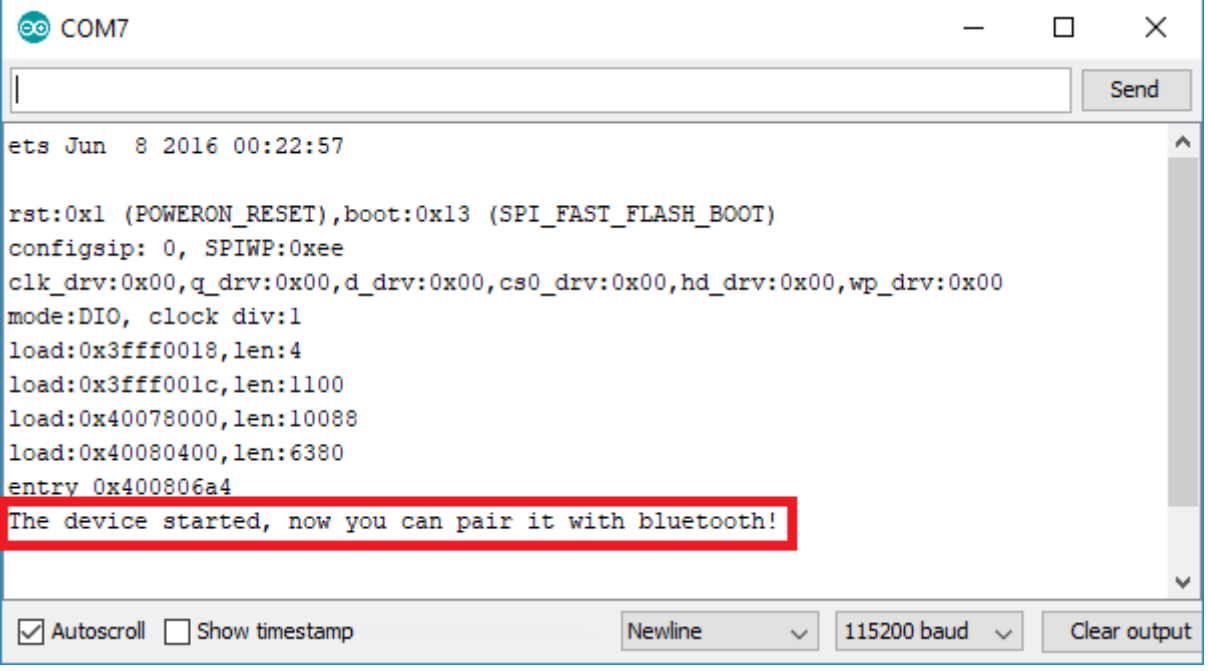


```
ets Jun  8 2016 00:22:57


rst:0x1 (POWERON_RESET),boot:0x13 (SPI_FAST_FLASH_BOOT)
configsip: 0, SPIWP:0xee
clk_drv:0x00,q_drv:0x00,d_drv:0x00,cs0_drv:0x00,hd_drv:0x00,wp_drv:0x00
mode:DIO, clock div:1
load:0x3fff0018,len:4
load:0x3fff001c,len:1100
load:0x40078000,len:10088
load:0x40080400,len:6380
entry 0x400806a4
The device started, now you can pair it with bluetooth!
```

Go to your smartphone and open the **"Serial Bluetooth Terminal"** app. Make sure you've enable your smartphone's Bluetooth.


To connect to the ESP32 for the first time, you need to pair a new device.
Go to **Devices**.

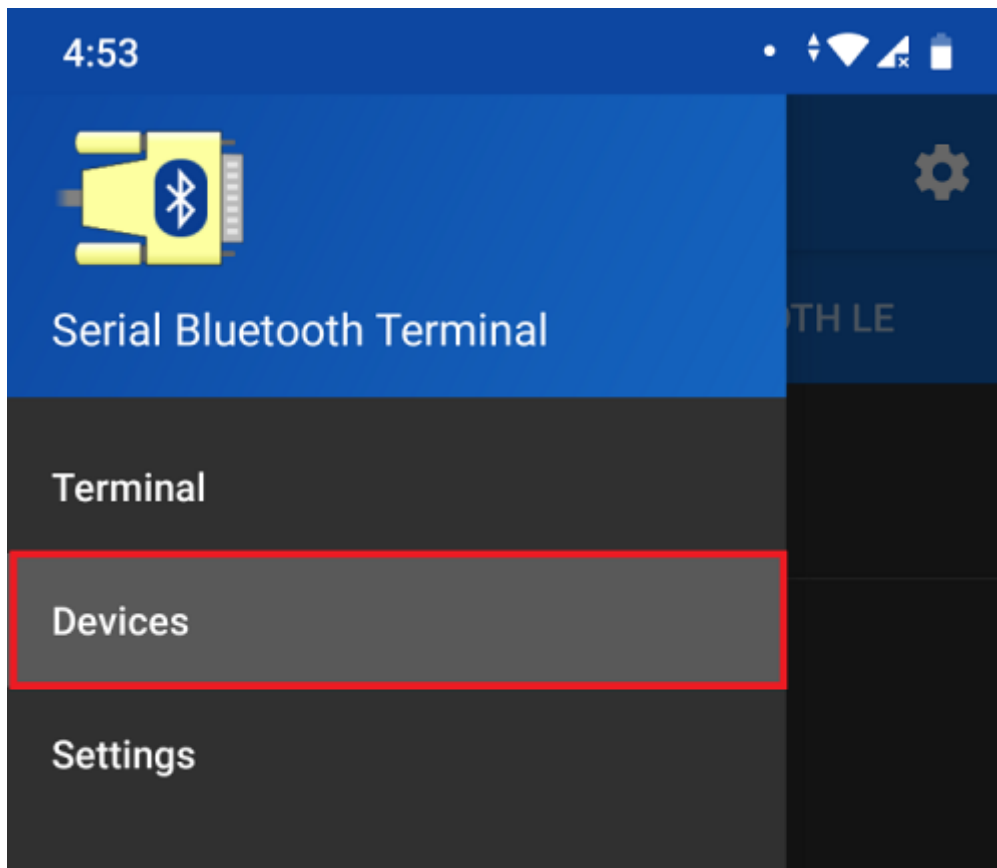


Click the settings icon, and select **Pair new device**. You should get a list with the available Bluetooth devices, including the **ESP32test**. Pair with the **ESP32test**.

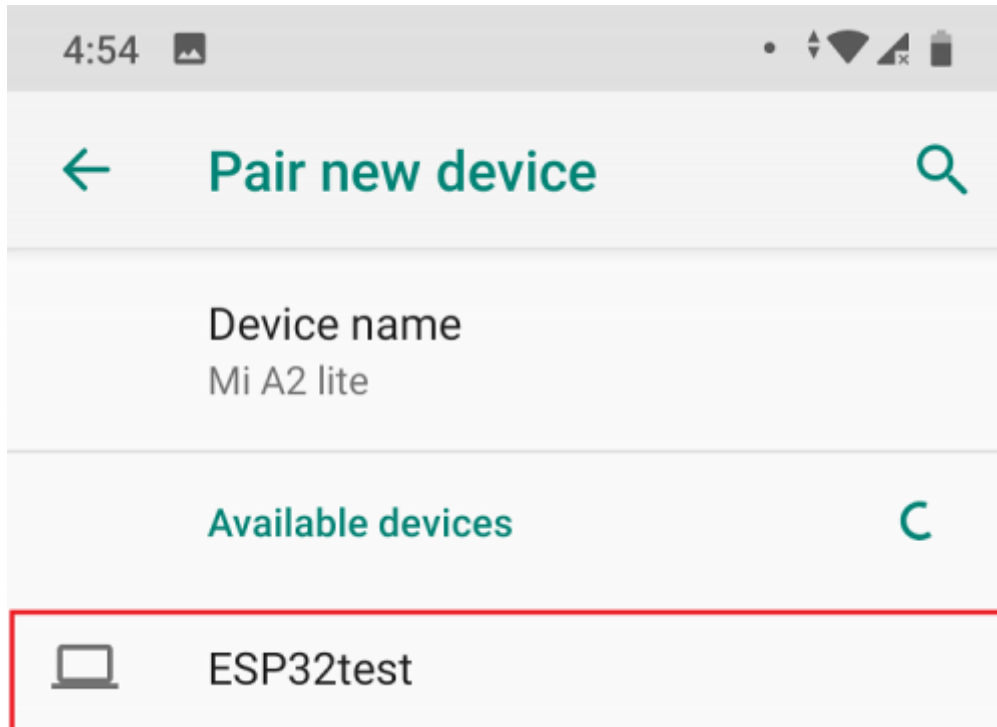


Then, go back to the Serial Bluetooth Terminal. Click the icon at the top to connect to the ESP32. You should get a “**Connected**” message.

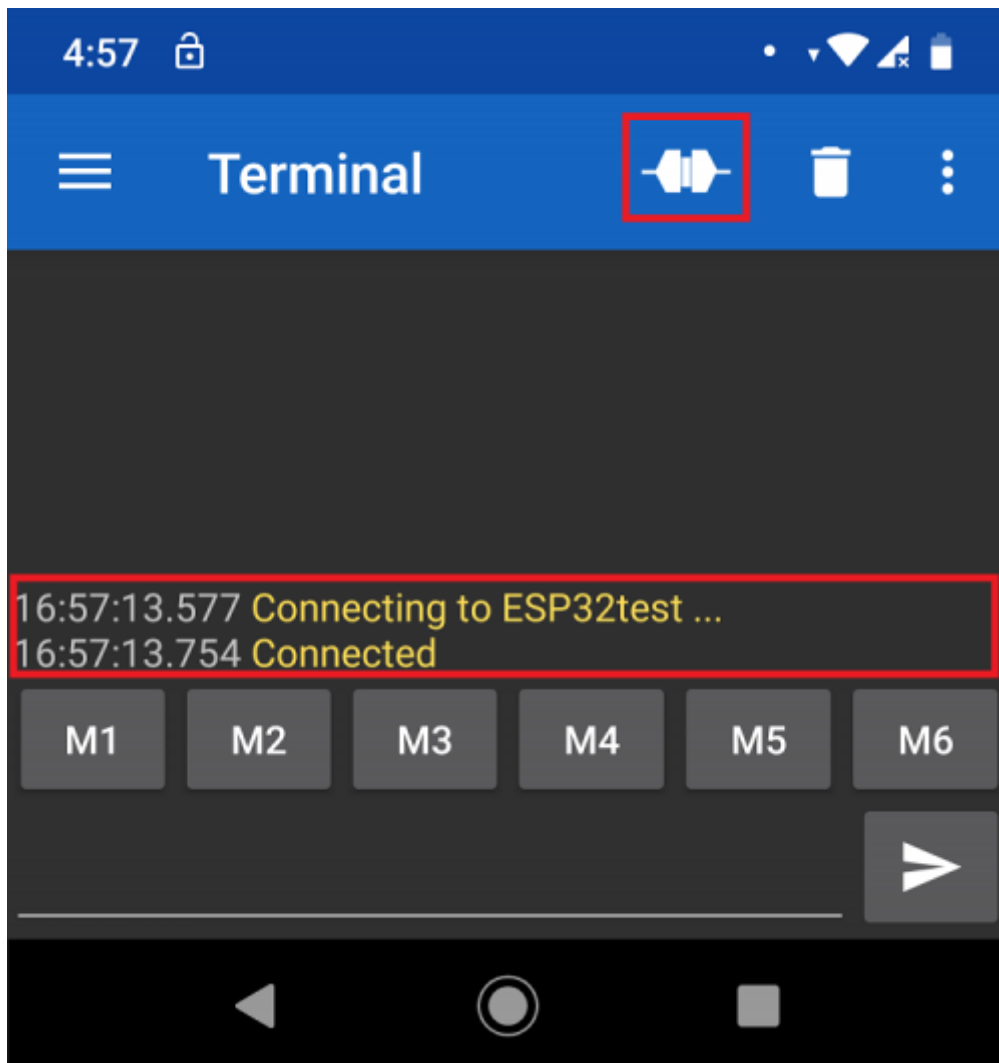

After that, type something in the Serial Bluetooth Terminal app. For example, **“Hello”**.

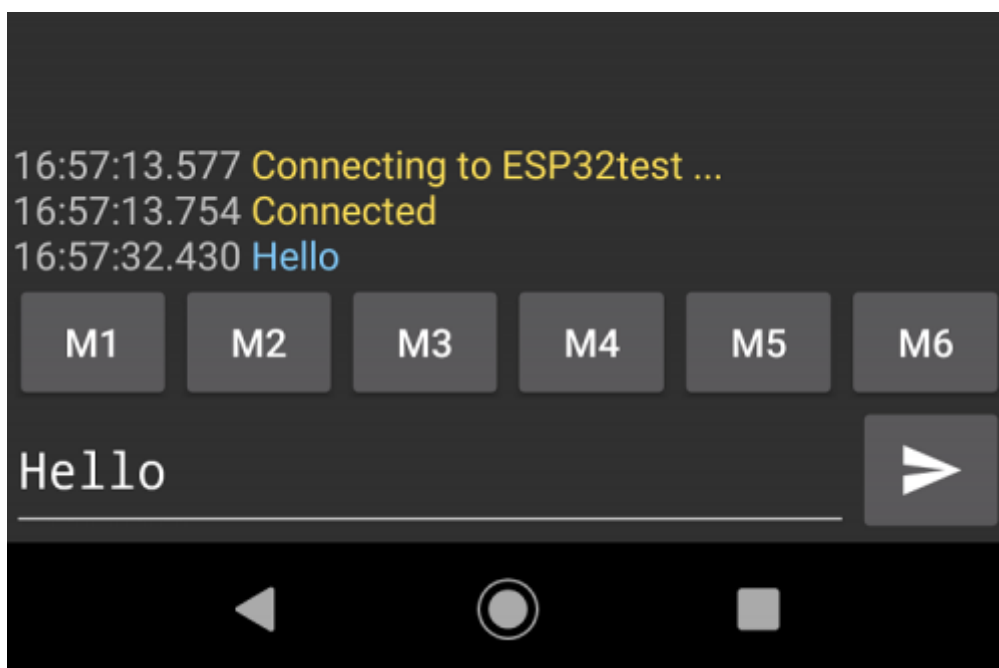

You should instantly receive that message in the Arduino IDE Serial Monitor.

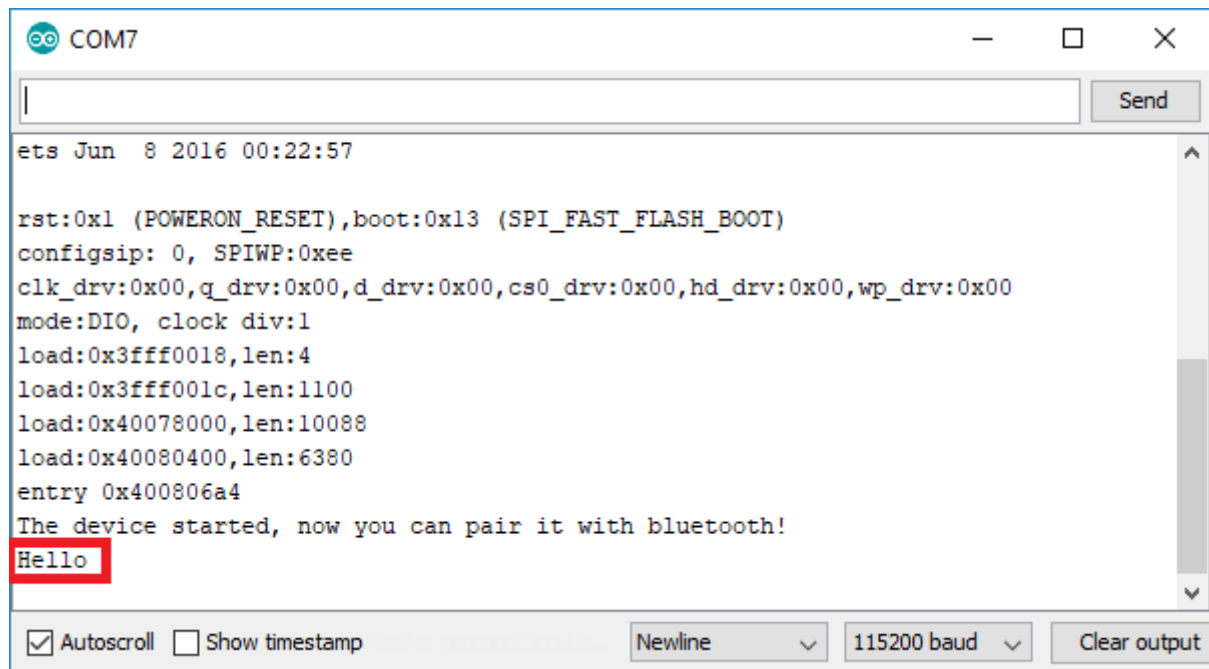


The screenshot shows the Arduino IDE Serial Monitor window titled 'COM7'. The input field at the top is empty, and the 'Send' button is visible. The output area displays the following text:

```
ets Jun  8 2016 00:22:57

rst:0x1 (POWERON_RESET),boot:0x13 (SPI_FAST_FLASH_BOOT)
configsip: 0, SPIWP:0xee
clk_drv:0x00,q_drv:0x00,d_drv:0x00,cs0_drv:0x00,hd_drv:0x00,wp_drv:0x00
mode:DIO, clock div:1
load:0x3fff0018,len:4
load:0x3fff001c,len:1100
load:0x40078000,len:10088
load:0x40080400,len:6380
entry 0x400806a4
The device started, now you can pair it with bluetooth!
Hello
```


At the bottom of the window, there are checkboxes for 'Autoscroll' (checked) and 'Show timestamp' (unchecked), a 'Newline' dropdown menu, a '115200 baud' dropdown menu, and a 'Clear output' button.

You can also exchange data between your Serial Monitor and your smartphone. Type something in the Serial Monitor top bar and press the **“Send”** button.

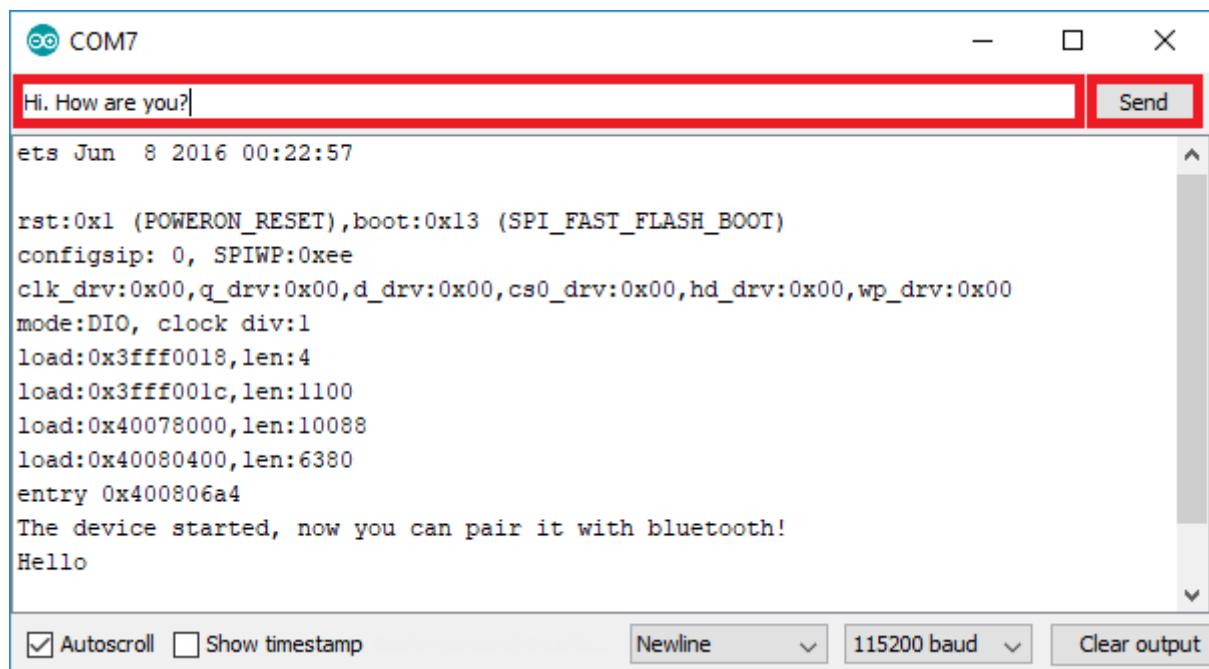

This screenshot shows the same Serial Monitor window, but now the input field at the top contains the text 'Hi. How are you?'. The 'Send' button is highlighted with a red box. The output area shows the same boot logs as before, followed by the 'Hello' message.


You should instantly receive that message in the Serial Bluetooth Terminal App.

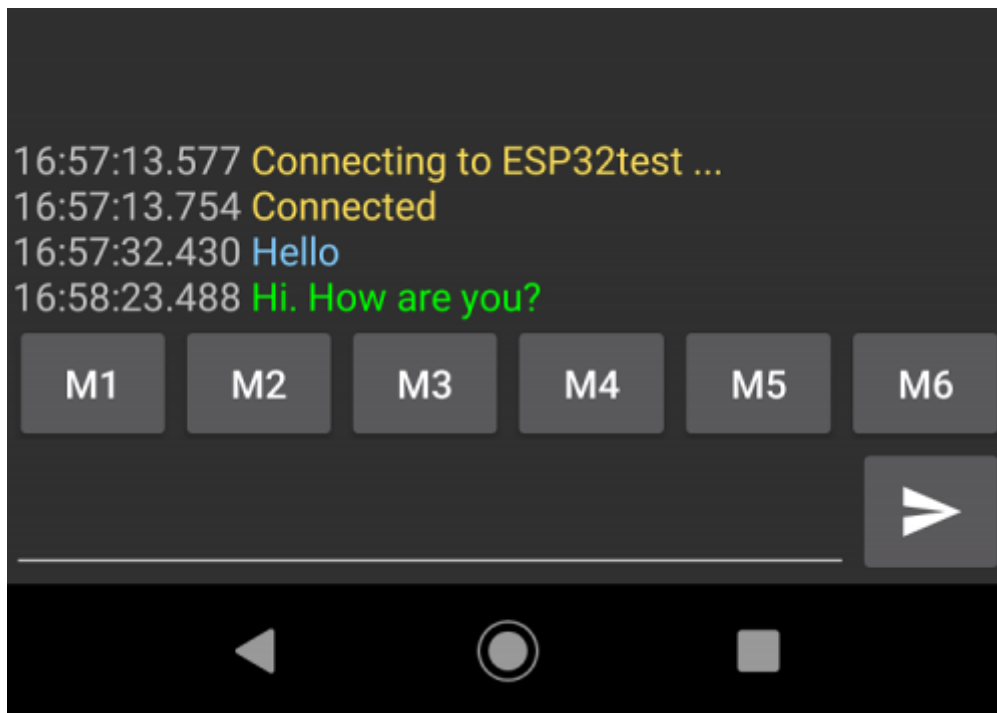

Exchange Data using Bluetooth Serial

Now that you know how to exchange data using Bluetooth Serial, you can modify the previous sketch to make something useful. For example, control the ESP32 outputs when you receive a certain message, or send data to your smartphone like sensor readings.

The project we'll build sends temperature readings every 10 seconds to your smartphone. We'll be using the [DS18B20 temperature sensor](#).

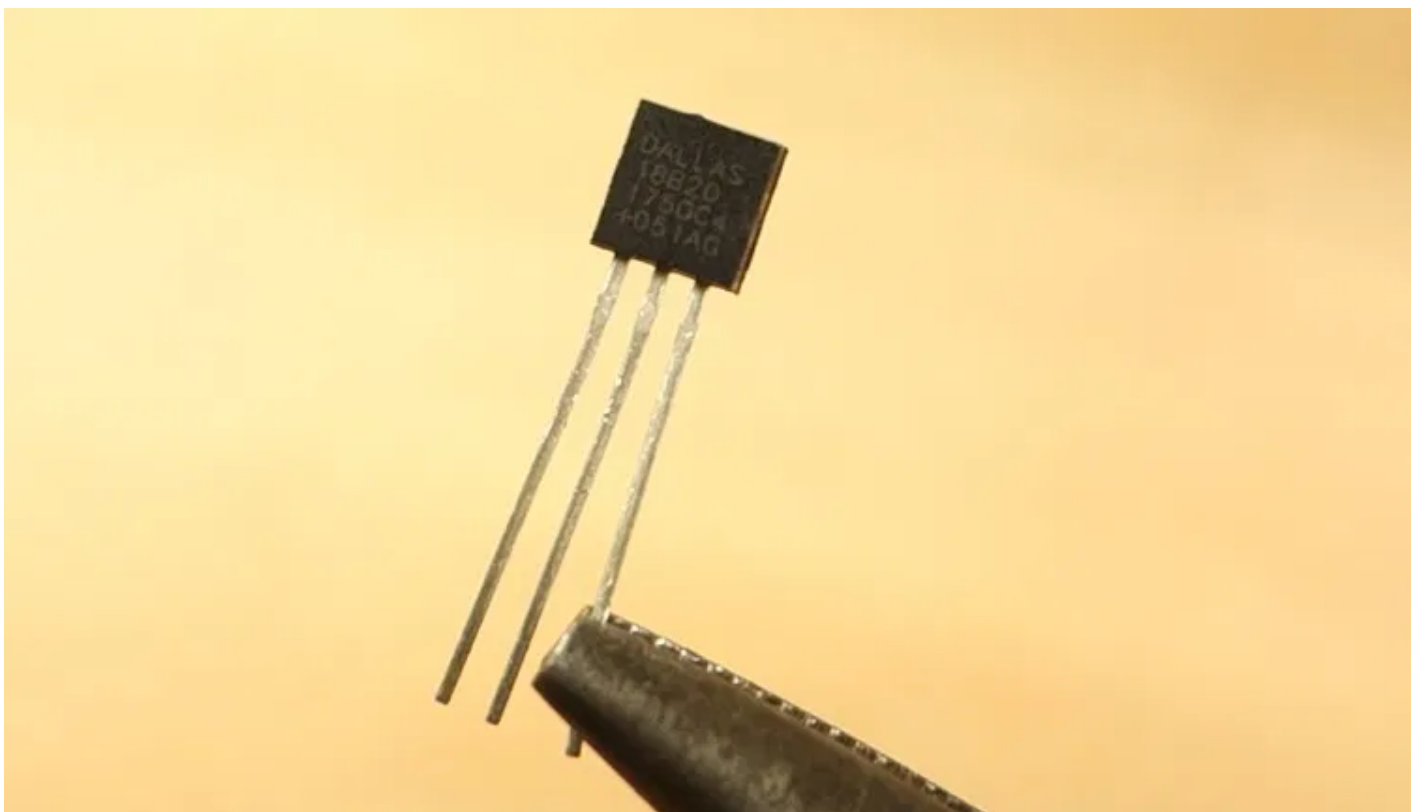


Through the Android app, we'll send messages to control an ESP32 output. When the ESP32 receives the **led_on** message, we'll turn the GPIO on, when it receives the **led_off** message, we'll turn the GPIO off.

Schematic

Before proceeding with this project, assemble the circuit by following the next schematic diagram.

Connect an LED to **GPIO25**, and connect the DS18B20 data pin to **GPIO32**.

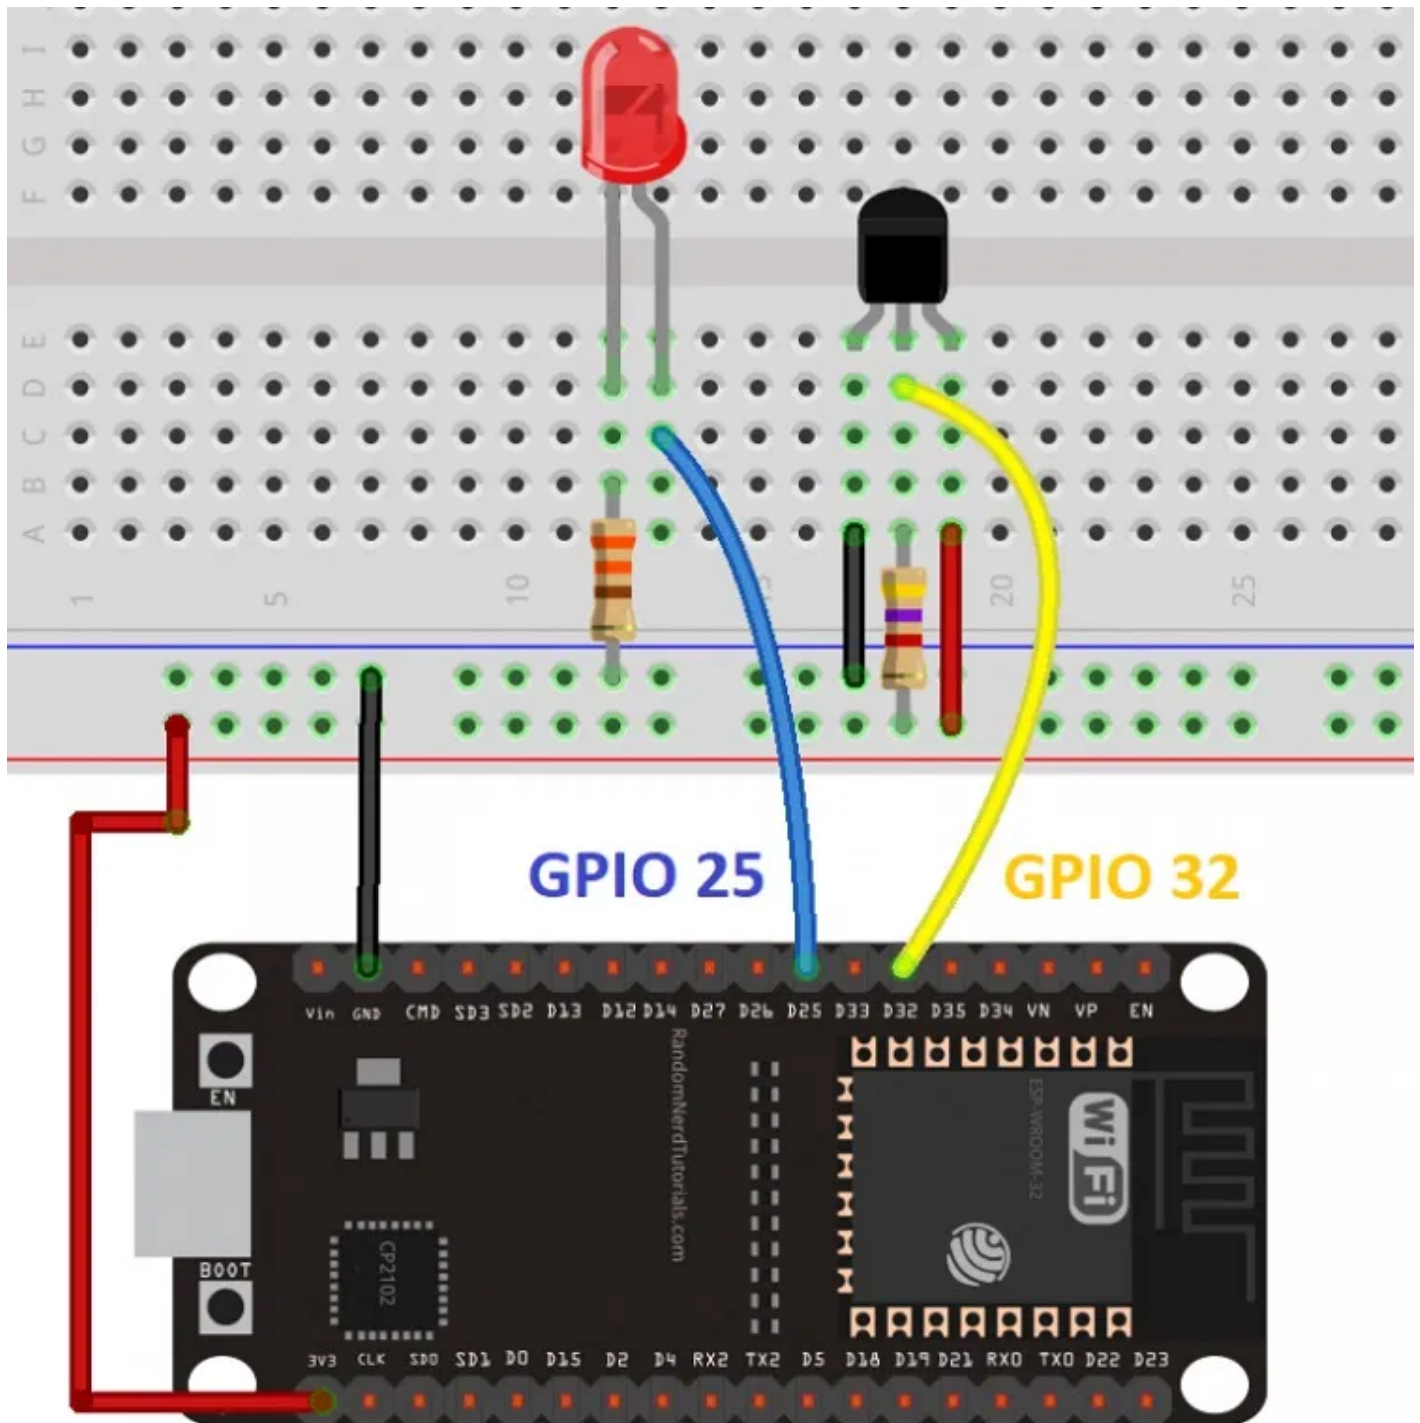

Recommended reading: [ESP32 Pinout Reference: Which GPIO pins should you use?](https://randomnerdtutorials.com/esp32-pinout-reference-which-gpio-pins-should-you-use/)

Code

To work with the DS18B20 temperature sensor, you need to install the [One Wire library by Paul Stoffregen](#) and the [Dallas Temperature library](#). Follow the next instructions to install these libraries, if you haven't already.

One Wire library

1. [Click here to download the One Wire library](#). You should have a .zip folder in your Downloads
2. Unzip the .zip folder and you should get **OneWire-master** folder
3. Rename your folder from **OneWire-master** to **OneWire**
4. Move the **OneWire** folder to your Arduino IDE installation **libraries** folder
5. Finally, re-open your Arduino IDE

Dallas Temperature library

1. [Click here to download the Dallas Temperature library](#). You should have a .zip folder in your Downloads
2. Unzip the .zip folder and you should get **Arduino-Temperature-Control-Library-master** folder
3. Rename your folder from **Arduino-Temperature-Control-Library-master** to **DallasTemperature**
4. Move the **DallasTemperature** folder to your Arduino IDE installation **libraries** folder
5. Finally, re-open your Arduino IDE

After assembling the circuit and installing the necessary libraries, copy the following sketch to your Arduino IDE.

```
/*  
  Rui Santos  
  Complete project details at https://randomnerdtutorials.com  
  */  
  
// Load libraries  
#include "BluetoothSerial.h"  
#include <OneWire.h>  
#include <DallasTemperature.h>  
  
// Check if Bluetooth configs are enabled  
#if !defined(CONFIG_BT_ENABLED) || !defined(CONFIG_BLUEDROID_ENABLED)  
#error Bluetooth is not enabled! Please run `make menuconfig` to and enable it  
#endif  
  
// Bluetooth Serial object  
BluetoothSerial SerialBT;
```

```
// GPIO where LED is connected to
const int ledPin = 25;

// GPIO where the DS18B20 is connected to
const int oneWireBus = 32;
// Setup a oneWire instance to communicate with any OneWire devices
OneWire oneWire(oneWireBus);
// Pass our oneWire reference to Dallas Temperature sensor
DallasTemperature sensors(&oneWire);

// Handle received and sent messages
String message = "";
char incomingChar;
String temperatureString = "";
```

[View raw code](#)

How the Code Works

Let's take a quick look at the code and see how it works.

Start by including the necessary libraries. The `BluetoothSerial` library for Bluetooth, and the `OneWire` and `DallasTemperature` for the DS18B20 temperature sensor.

```
#include "BluetoothSerial.h"
#include <OneWire.h>
#include <DallasTemperature.h>
```

Create a `BluetoothSerial` instance called `SerialBT`.

```
BluetoothSerial SerialBT;
```

Create a variable called `ledPin` to hold the GPIO you want to control. In this case, `GPIO25` has an LED connected.

```
const int ledPin = 25;
```

Define the DS18B20 sensor pin and create objects to make it work. The temperature sensor is connected to `GPIO32`.

```
// GPIO where the DS18B20 is connected to
const int oneWireBus = 32;
// Setup a oneWire instance to communicate with any OneWire devices
OneWire oneWire(oneWireBus);
// Pass our oneWire reference to Dallas Temperature sensor
DallasTemperature sensors(&oneWire);
```

Create an empty string called `message` to store the received messages.

```
String message = "";
```

Create a char variable called `incomingChar` to save the characters coming via Bluetooth Serial.

```
char incomingChar;
```

The `temperatureString` variable holds the temperature readings to be sent via Bluetooth.

```
String temperatureString = "";
```

Create auxiliar timer variables to send readings every 10 seconds.

```
unsigned long previousMillis = 0; // Stores last time temperature was published
const long interval = 10000;      // interval at which to publish sensor readings
```

setup()

In the `setup()`, set the `ledPin` as an output.

```
pinMode(ledPin, OUTPUT);
```

Initialize the ESP32 as a bluetooth device with the “ESP32” name.


```
SerialBT.begin("ESP32"); //Bluetooth device name
```

loop()

In the `loop()`, send the temperature readings, read the received messages and execute actions accordingly.

The following snippet of code, checks if 10 seconds have passed since the last reading. If it's time to send a new reading, we get the latest temperature and save it in Celsius and Fahrenheit in the `temperatureString` variable.

```
unsigned long currentMillis = millis();
if (currentMillis - previousMillis >= interval) {
  previousMillis = currentMillis;
  sensors.requestTemperatures();
  temperatureString = " " + String(sensors.getTempCByIndex(0)) + "C " + String(
```

Then, to send the `temperatureString` via bluetooth, use `SerialBT.println()`.

```
SerialBT.println(temperatureString);
```

The next if statement reads incoming messages. When you receive messages via serial, you receive a character at a time. You know that the message ended, when you receive `\n`.

So, we check if there's data available in the Bluetooth serial port.

```
if (SerialBT.available()) {
```

If there is, we'll save the characters in the `incomingChar` variable.

```
char incomingChar = SerialBT.read();
```

If the `incomingChar` is different than `\n`, we'll concatenate that char character to our message.

```
if (incomingChar != '\n'){  
    message += String(incomingChar);  
}
```

When we're finished reading the characters, we clear the `message` variable. Otherwise all received messages would be appended to each other.

```
message = "";
```

After that, we have two if statements to check the content of the message. If the message is `led_on`, the LED turns on.


```
if (message == "led_on"){  
    digitalWrite(ledPin, HIGH);  
}
```

If the message is `led_off`, the LED turns off.

```
else if (message == "led_off"){  
    digitalWrite(ledPin, LOW);  
}
```

Testing the Project


Upload the previous sketch to your ESP32 board. Then, open the Serial Monitor, and press the ESP32 Enable button. When you receive the following message, you can go to your smartphone and connect with the ESP32.

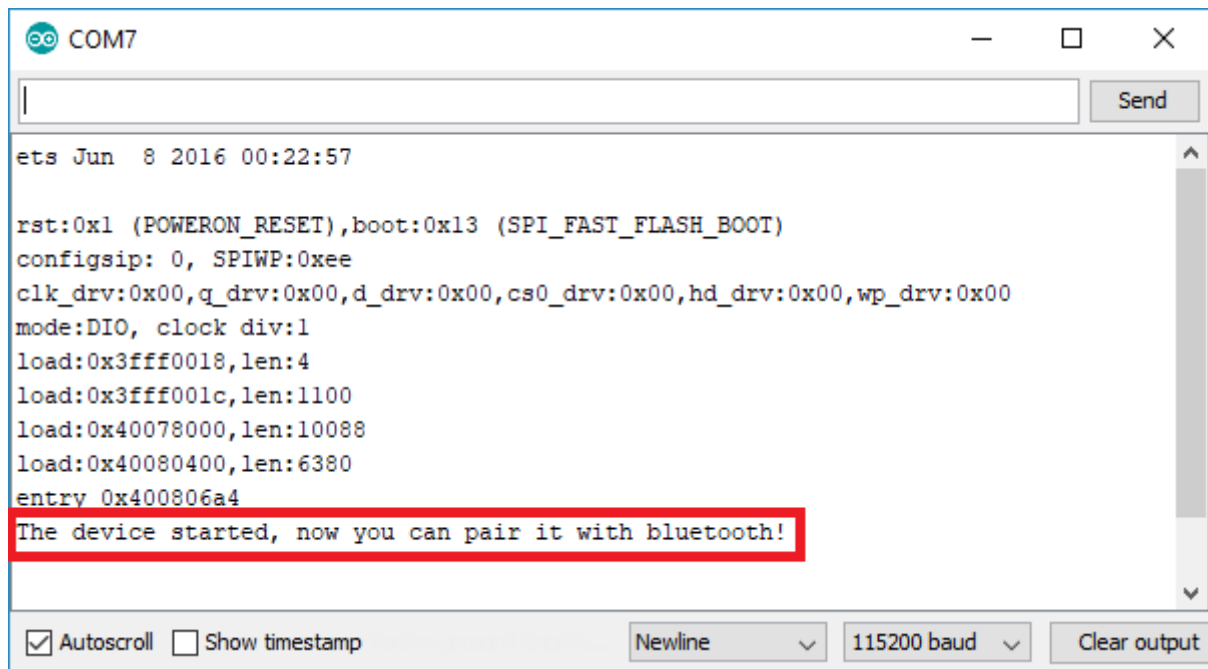


```
ets Jun 8 2016 00:22:57

rst:0x1 (POWERON_RESET),boot:0x13 (SPI_FAST_FLASH_BOOT)
configsip: 0, SPIWP:0xee
clk_drv:0x00,q_drv:0x00,d_drv:0x00,cs0_drv:0x00,hd_drv:0x00,wp_drv:0x00
mode:DIO, clock div:1
load:0x3fff0018,len:4
load:0x3fff001c,len:1100
load:0x40078000,len:10088
load:0x40080400,len:6380
entry 0x400806a4
The device started, now you can pair it with bluetooth!
```

Then, you can write the “**led_on**” and “**led_off**” messages to control the LED.

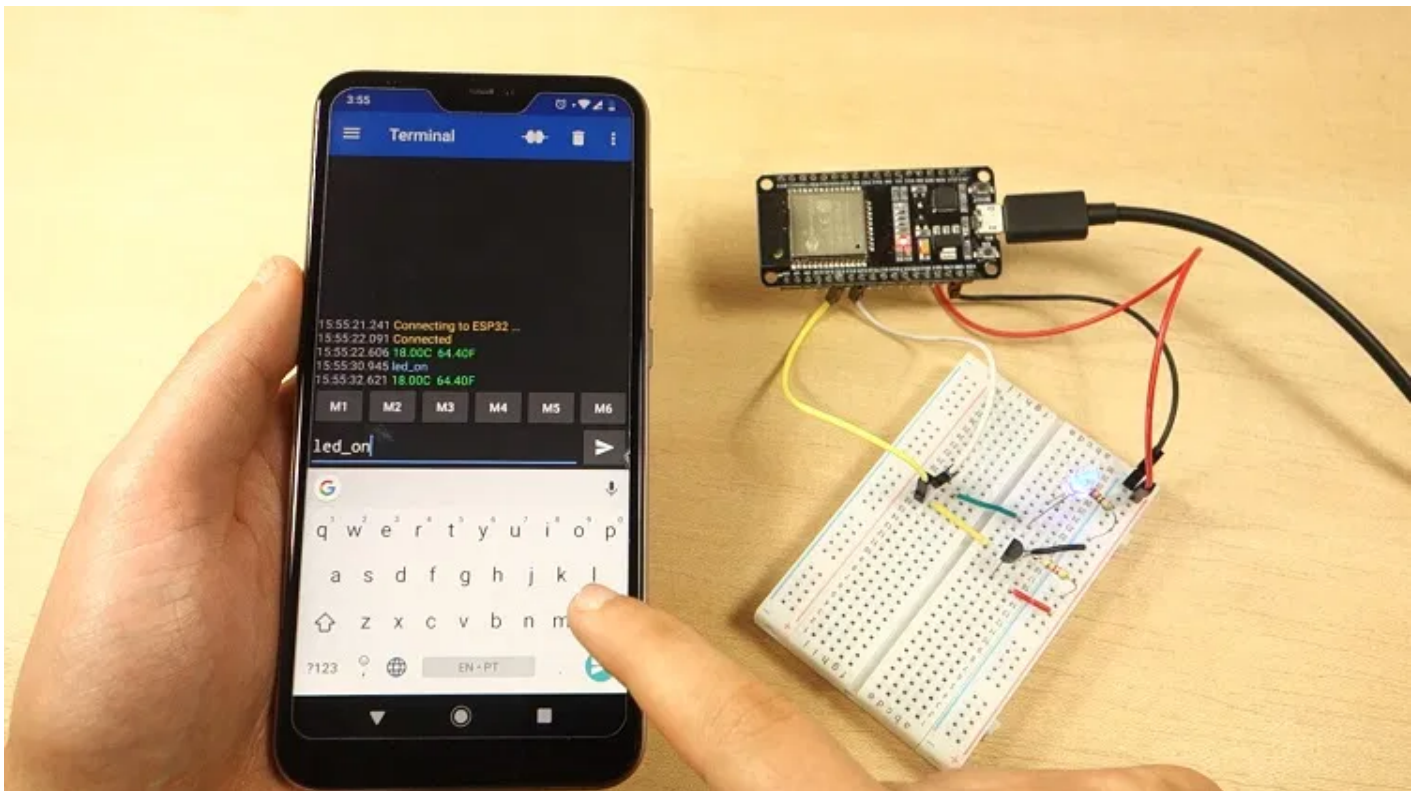

The application has several buttons in which you can save default messages. For example, you can associate **M1** with the “**led_on**” message, and **M2** with the “**led_off**” message.

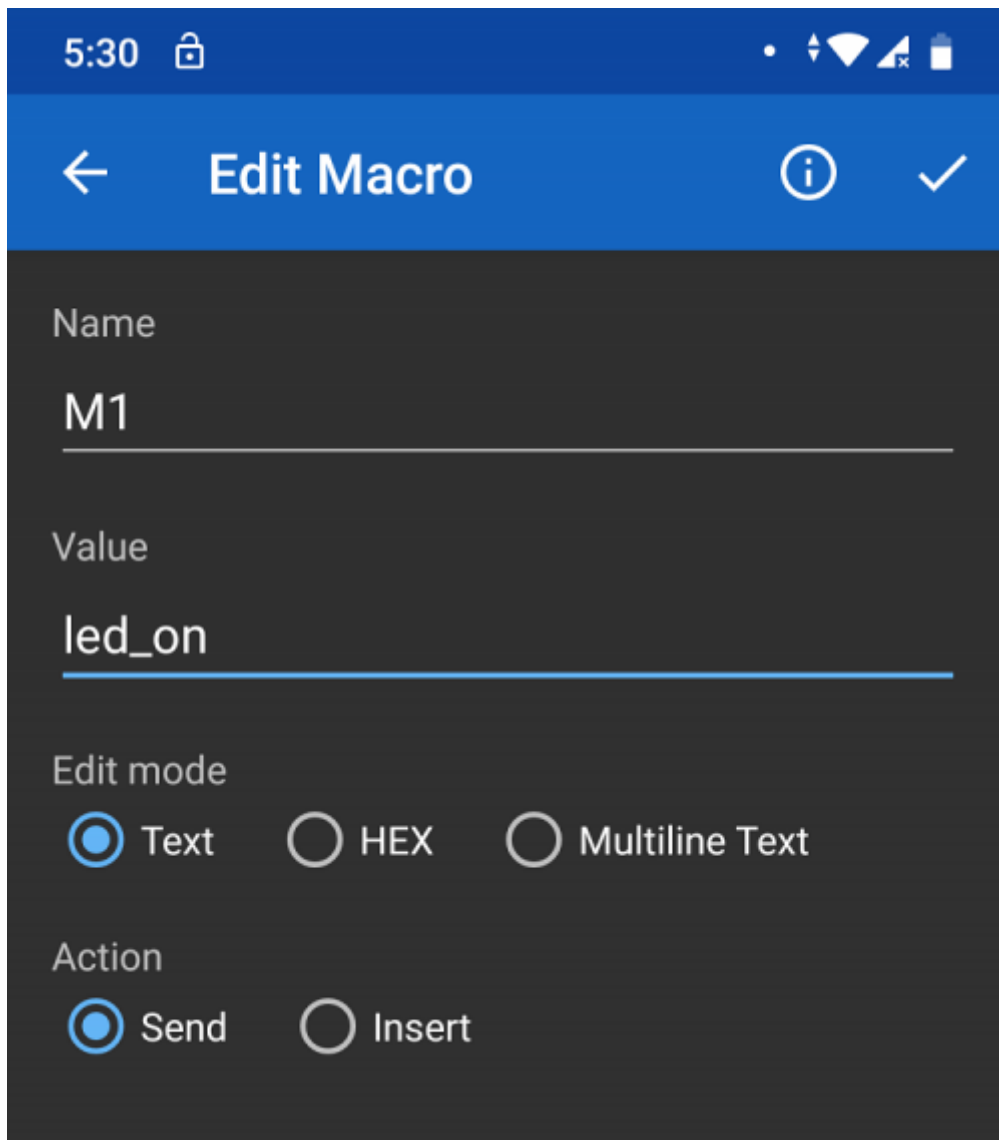

5:30

← Edit Macro ⓘ ✓

Name

M1

Value

led_on

Edit mode


☒ Text ☐ HEX ☐ Multiline Text

Action

☒ Send ☐ Insert

Now, you are able to control the ESP32 GPIOs.

At the same time, you should be receiving the temperature readings every 10 seconds.

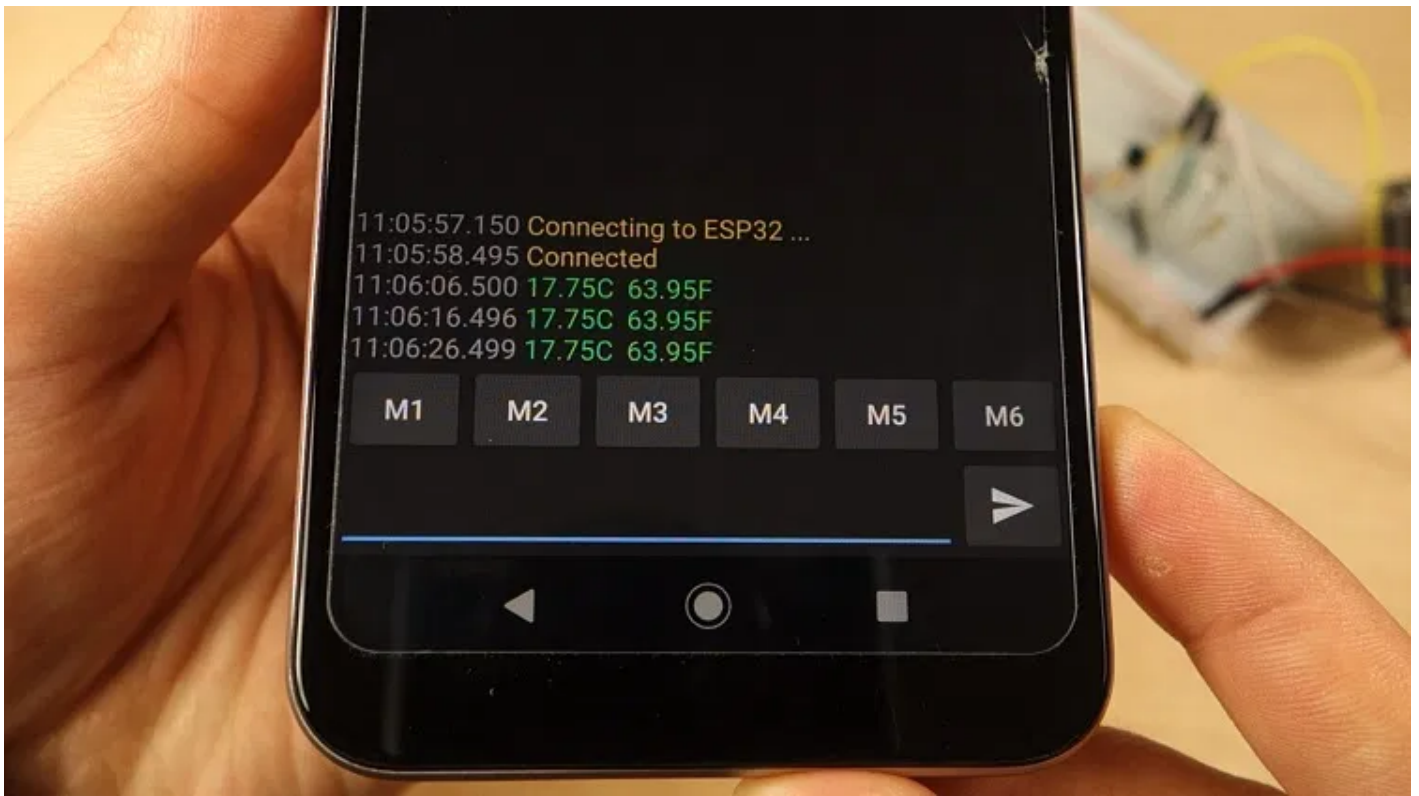

Wrapping Up

In summary, the ESP32 supports BLE and Bluetooth Classic. Using Bluetooth Classic is as simple as using serial communication and its functions.

If you want to learn how to use BLE with the ESP32, you can read our guide:

- [Getting Started with ESP32 Bluetooth Low Energy \(BLE\) on Arduino IDE](#)

We hope you've found this tutorial useful. For more projects with the ESP32 you can check our project's compilation: [20+ ESP32 Projects and Tutorials](#).